



95% Gas Furnace PARTS REFERENCE PAGE

Contact your RHS branch for pricing

Complete parts listing begins on pg. 05-200.

Parts are listed numerically by part number.

Part numbers beginning with a letter appear at the end of the listing.

For : **R95T**

RHS Code	Multi-Position Gas Furnace	040 1317MSA	060 1317MSA	070 1317MSA	085 1521MSA	100 1521MSA	115 1524MSA
05-45-73	1/2 hp Blower Motor.....51-104615-01.....	X	-	-	-	-	-
05-45-74	1/2 hp Blower Motor.....51-104615-02.....	-	X	-	-	-	-
05-45-75	1/2 hp Blower Motor.....51-104615-03.....	-	-	X	-	-	-
05-45-79	1 hp Blower Motor.....51-104617-02.....	-	-	-	-	X	-
05-45-80	1 hp Blower Motor.....51-104617-03.....	-	-	-	-	-	X
05-45-05	1 hp Blower Motor (R95TB).....51-104617-01.....	-	-	-	X	-	-
05-45-61	Drain Water Trap.....68-104346-01.....	X	X	X	X	X	X
05-45-03	Pressure Switch.....42-102069-01.....	X	X	X	-	-	-
05-45-06	Pressure Switch.....42-102069-10.....	-	-	-	X	-	-
05-45-07	Pressure Switch.....42-102069-02.....	-	-	-	-	X	-
05-45-08	Pressure Switch.....42-102069-08.....	-	-	-	-	-	X
05-45-09	Main Limit Switch.....47-104465-02.....	X	-	X	-	-	-
05-45-10	Main Limit Switch.....47-104465-01.....	-	X	-	X	X	-
05-45-11	Main Limit Switch.....47-104465-03.....	-	-	-	-	-	X
05-85-37	Rollout Switch.....47-22861-02.....	2	2	-	2	2	3
05-60-04	Rollout Switch.....47-22861-04.....	-	-	2	-	-	-
05-45-12	Transformer.....46-24124-06.....	X	X	X	X	X	X
05-45-20	Blower Wheel.....PD703026.....	X	-	-	-	-	-
05-45-21	Blower Wheel.....PD703027.....	-	X	X	-	-	-
05-45-22	Blower Wheel.....PD703028.....	-	-	-	X	X	-
05-45-23	Blower Wheel.....PD703029.....	-	-	-	-	-	X
05-45-25	Heat Exchanger.....AS-104120-01.....	X	-	-	-	-	-
05-45-26	Heat Exchanger.....AS-104120-02.....	-	X	-	-	-	-
05-45-27	Heat Exchanger.....AS-104120-05.....	-	-	X	-	-	-
05-45-28	Heat Exchanger.....AS-104120-17.....	-	-	-	X	-	-
05-45-29	Heat Exchanger.....AS-104120-15.....	-	-	-	-	X	-
05-45-30	Heat Exchanger.....AS-104120-21.....	-	-	-	-	-	X
05-45-31	Collector Box Kit.....68-104111-81.....	X	-	-	-	-	-
05-45-32	Collector Box Kit.....68-104111-84.....	-	X	-	-	-	-
05-45-33	Collector Box Kit.....68-104111-85.....	-	-	X	-	-	-
05-45-34	Collector Box Kit.....68-104111-86.....	-	-	-	X	-	-
05-45-35	Collector Box Kit.....68-104111-82.....	-	-	-	-	X	-
05-45-36	Collector Box Kit.....68-104111-83.....	-	-	-	-	-	X
05-45-37	Collector Box Gasket.....68-103546-03.....	X	X	X	-	-	-
05-45-38	Collector Box Gasket.....68-103546-02.....	-	-	-	X	X	-
05-45-39	Collector Box Gasket.....68-103546-01.....	-	-	-	-	-	X
05-85-37	Manual Reset (2).....47-22861-02.....	2	2	-	2	2	2
05-60-04	Manual Reset (2).....47-22861-04.....	-	-	2	-	-	-
05-81-54	Burner Assembly.....AS-61984-03.....	X	-	-	-	-	-
05-81-55	Burner Assembly.....AS-61984-04.....	-	X	-	-	-	-
05-81-56	Burner Assembly.....AS-61984-05.....	-	-	X	-	-	-
05-81-57	Burner Assembly.....AS-61984-06.....	-	-	-	X	-	-
05-81-58	Burner Assembly.....AS-61984-07.....	-	-	-	-	X	-
05-81-59	Burner Assembly.....AS-61984-08.....	-	-	-	-	-	X
05-45-13	Induced Draft Motor.....70-104157-82.....	X	X	X	X	X	X

Continued on next page



95% Gas Furnace PARTS REFERENCE PAGE

Contact your RHS branch for pricing

Complete parts listing begins on pg. 05-200.

Parts are listed numerically by part number.

Part numbers beginning with a letter appear at the end of the listing.

For : **R95T**

RHS Code	Gas Code = JC (first 2 letters of serial no.)	040 1317MSA	060 1317MSA	070 1317MSA	085 1521MSA	100 1521MSA	115 1524MSA
05-45-40	Water Sensor.....47-104184-01	X	X	X	X	X	X
05-86-57	Gas Valve - Natural gas.....60-100394-03	X	X	X	X	X	X
05-45-45	IFC Control Board.....62-104058-02	X	X	X	X	X	X
05-45-44	Flame Sensor.....62-23543-08	X	X	X	X	X	X
05-45-46	Spark Ignitor DSI.....62-24141-05	X	X	X	X	X	X
05-45-42	LP Conversion Kit.....FP-33	X	X	X	X	X	X
05-87-03	Nat Gas Orifice #50.....62-22175-50	3	4	5	6	7	8
05-89-31	Nat Gas Orifice #51 (optional).....62-22175-51	3	4	5	6	7	8
05-89-33	LP Orifice 1.1 mm.....62-22175-90	X	X	X	X	X	X
05-45-47	Door Switch.....42-22692-10	X	X	X	X	X	X
05-45-48	Exhaust Coupling.....68-104146-02	X	X	X	X	X	X
05-45-50	Inducer Coupling.....PD703024	X	X	X	X	X	X
05-45-51	Bushing Inducer Coupling.....68-104520-01	X	X	X	X	X	X
05-45-52	Rubber Plug.....56-104377-01	X	X	X	X	X	X
05-45-53	Outlet Air Elbow.....68-104145-03	X	X	X	X	X	X
05-86-10	Pressure Switch Tube.....79-21491-83	X	X	X	X	X	X
05-45-54	Drain Tube.....79-104393-01	X	X	X	X	X	X
05-45-55	Drain Tube.....79-104394-01	X	X	X	X	X	X
05-45-56	Hose Clamp 5/8".....64-104619-01	X	X	X	X	X	X
05-45-61	Drain Water Trap.....68-104346-01	X	X	X	X	X	X
05-45-57	O-Ring.....68-104386-02	X	X	X	X	X	X
05-45-14	Inducer Gasket.....68-104152-01	X	X	X	X	X	X
05-45-58	Vinyl Cap.....56-103685-01	X	X	X	X	X	X
05-45-59	Transition Outlet Air.....68-104133-02	X	X	X	X	X	X
05-45-60	Transition Gasket.....68-24022-03	X	X	X	X	X	X

Conversion Kits

05-45-00	Complete Parts Bag.....68-104446-01	X	X	X	X	X	X
05-45-01	Conversion Kit.....RXGY-CK	X	X	X	X	X	X
05-45-02	Downflow Zero Clearance Kit.....RXGY-ZK	X	X	X	X	X	X

05-44-90	17 1/2" wide	Furnace Door Trim.....68-104374-11
05-44-91	21" wide	Furnace Door Trim.....68-104374-12
05-44-92	24" wide	Furnace Door Trim.....68-104374-13
05-44-93	Door Latch Kit (Handles and cams)	PD-644035



95% Gas Furnace PARTS REFERENCE PAGE



Contact your RHS branch for pricing

Complete parts listing begins on pg. 05-200.

Parts are listed numerically by part number.

Part numbers beginning with a letter appear at the end of the listing.

For : **R95TC**

RHS Code	Gas Code =KA (first 2 letters of serial no.)	040 1317MSA	060 1317MSA	070 1317MSA	085 1521MSA	100 1521MSA	115 1524MSA
05-45-61	Condensate Drain 68-104346-01	-	X	X	X	X	X
05-45-01	Conversion Kit RXGY-CK	X	X	X	X	X	X
05-45-02	Zero Clearance Downflow Conversion Kit..... RXGY-ZK	X	X	X	X	X	X
05-45-03	Vent Pressure Switch..... 42-102069-01	X	X	X	-	-	-
05-45-06	Vent Pressure Switch..... 42-102069-10	-	-	-	X	-	-
05-45-07	Vent Pressure Switch..... 42-102069-02	-	-	-	-	X	-
05-45-08	Vent Pressure Switch..... 42-102069-08	-	-	-	-	-	X
05-45-09	Main Limit Switch..... 47-104465-02	X	-	X	-	-	-
05-45-10	Main Limit Switch..... 47-104465-01	-	X	-	X	X	-
05-45-11	Main Limit Switch..... 47-104465-03	-	-	-	-	-	X
05-85-37	Manual Reset 47-22861-02	X	X	-	X	X	X
05-60-04	Manual Reset 47-22861-04	-	-	X	-	-	-
05-45-12	Transformer 46-24124-06	-	-	-	-	-	-
05-45-13	Induced Draft Blower..... 70-104157-82	X	X	X	X	X	X
05-45-20	Blower Wheel..... PD703026	X	-	-	-	-	-
05-45-21	Blower Wheel..... PD703027	-	X	X	-	-	-
05-45-22	Blower Wheel..... PD703028	-	-	-	X	X	-
05-45-23	Blower Wheel..... PD703029	-	-	-	-	-	X
05-47-26	X-13 Blower Motor 1/2 HP..... 51-102172-08	X	-	-	-	-	-
05-47-27	X-13 Blower Motor 1/2 HP..... 51-102172-09	-	X	-	-	-	-
05-47-28	X-13 Blower Motor 1/2 HP..... 51-102172-10	-	-	X	-	-	-
05-47-29	X-13 Blower Motor 1 HP..... 51-104357-01	-	-	-	X	-	-
05-47-30	X-13 Blower Motor 1 HP..... 51-104357-02	-	-	-	-	X	-
05-47-31	X-13 Blower Motor 1 HP..... 51-102280-13	-	-	-	-	-	X
05-45-25	Heat Exchanger..... AS-104120-01	X	-	-	-	-	-
05-45-26	Heat Exchanger..... AS-104120-02	-	X	-	-	-	-
05-45-27	Heat Exchanger..... AS-104120-05	-	-	X	-	-	-
05-45-28	Heat Exchanger..... AS-104120-17	-	-	-	X	-	-
05-45-29	Heat Exchanger..... AS-104120-15	-	-	-	-	X	-
05-45-30	Heat Exchanger..... AS-104120-21	-	-	-	-	-	X
05-45-31	Collector Box Kit 68-104111-81	X	-	-	-	-	-
05-45-32	Collector Box Kit 68-104111-84	-	X	-	-	-	-
05-45-33	Collector Box Kit 68-104111-85	-	-	X	-	-	-
05-45-34	Collector Box Kit 68-104111-86	-	-	-	X	-	-
05-45-35	Collector Box Kit 68-104111-82	-	-	-	-	X	-
05-45-36	Collector Box Kit 68-104111-83	-	-	-	-	-	X
05-45-37	Collector Box Gasket..... 68-103546-03	X	X	X	-	-	-
05-45-38	Collector Box Gasket..... 68-103546-02	-	-	-	X	X	-
05-45-39	Collector Box Gasket..... 68-103546-01	-	-	-	-	-	X

Continued on Next Page...



95% Gas Furnace PARTS REFERENCE PAGE



Contact your RHS branch for pricing

Complete parts listing begins on pg. 05-200.

Parts are listed numerically by part number.

Part numbers beginning with a letter appear at the end of the listing.

For : R95TC		040	060	070	085	100	115
RHS Code	Gas Code = KA (first 2 letters of serial no.)	1317MSA	1317MSA	1317MSA	1521MSA	1521MSA	1524MSA
05-45-40	Water Sensor.....47-104184-01	X	X	X	X	X	X
05-81-54	Burner.....AS-61984-03	X	-	-	-	-	-
05-81-55	Burner.....AS-61984-04	-	X	-	-	-	-
05-81-56	Burner.....AS-61984-05	-	-	X	-	-	-
05-81-57	Burner.....AS-61984-06	-	-	-	X	-	-
05-81-58	Burner.....AS-61984-07	-	-	-	-	X	-
05-81-59	Burner.....AS-61984-08	-	-	-	-	-	X
05-45-41	Natural Gas- Gas Valve.....60-103901-01	X	X	X	X	X	X
05-47-25	IFC Board.....62-105217-01	X	X	X	X	X	X
05-45-44	Flame Sensor62-23543-08.....	X	X	X	X	X	X
05-45-46	Spark Ignitor.....62-24141-05.....	X	X	X	X	X	X
05-44-42	LP Conversion KitFP-38.....	X	X	X	X	X	X