



96% Gas Furnace PARTS REFERENCE PAGE

See current pricing beginning with page 05-200.

Parts will be listed numerically by Part Number.

Part numbers beginning with a letter appear at the end of the listing.

For: **R96V / U96V & R96P**

Common parts for **both**

***96VA**_____MSA *Prestige* and

R96PA_____MSA *Classic Plus*

RHS Code		2317 040	2317 060	2317 070	2521 085	2521 100	2524 115
05-45-61	Drain Water Trap68-104346-01	X	X	X	X	X	X
05-45-00	Complete Parts Bag68-104446-01	X	X	X	X	X	X
05-45-01	Conversion KitRXGY-CK	X	X	X	X	X	X
05-45-02	Downflow Zero Clearance KitRXGY-ZK	X	X	X	X	X	X
05-45-09	Main Limit47-104465-02	X	X	X	X	X	X
05-45-64	Draft Inducer70-104157-83	X	X	X	X	X	-
05-45-66	Draft Inducer70-104157-84	-	-	-	-	-	X
05-45-20	Blower WheelPD703026	X	X	X	-	-	-
05-45-23	Blower WheelPD703029	-	-	-	X	X	X
05-45-25	Heat ExchangerAS-104120-01	X	X	-	-	-	X
05-45-30	Heat ExchangerAS-104120-21	-	-	X	-	-	X
05-45-69	Heat ExchangerAS-104120-18	-	-	-	X	-	-
05-45-70	Heat ExchangerAS-104120-19	-	-	-	-	X	-
05-45-71	Gas Valve60-101921-05	X	X	X	X	X	X
05-45-44	Flame Sensor62-23543-08	X	X	X	X	X	X
05-45-46	Spark Ignitor62-24141-05	X	X	X	X	X	X
05-45-43	LP KitFP-34	X	X	X	X	X	X
05-44-90	17 1/2" wideFurnace Door Trim.....68-104374-11						
05-44-91	21" wideFurnace Door Trim.....68-104374-12						
05-44-92	24" wideFurnace Door Trim.....68-104374-13						
05-44-93	Door Latch Kit (Handles and cams)PD-644035						

Exclusively for R96V/U96V

		2317 040	2317 060	2317 070	2521 085	2521 100	2524 115
05-60-04	Manual Reset Limit 2 are required47-22861-04	X	X	X	X	X	X
05-45-63	Transformer (50VA)46-102856-02	X	X	X	X	X	X
05-09-37	1/2 hp ECM Motor51-102602-01	X	X	X	-	-	-
05-28-14	3/4 hp ECM Motor51-102603-01	-	-	-	X	X	X
05-45-72	IFC Board62-104061-04	X	X	X	X	X	X

EcoNet Communicating Thermostat & Control: Complete listing on pg. 05-139B

Exclusively for R96P

		2317 040	2317 060	2317 070	2521 085	2521 100	2524 115
05-60-04	Manual Reset Limit Only 1 required47-22861-04	X	X	X	X	X	X
05-45-12	Transformer (40VA)46-24124-06	X	X	X	X	X	X
05-45-15	1/4 hp ECM Motor51-104380-01	X	X	X	-	-	-
05-45-17	3/4 hp ECM Motor51-104342-01	-	-	-	X	X	X
05-45-76	IFC Board62-104059-01	X	X	X	X	X	X

Continued on next page....



Gas Furnace PARTS REFERENCE PAGE

See current pricing beginning with page 05-200.

Parts will be listed numerically by Part Number.

Part numbers beginning with a letter appear at the end of the listing.

For: R92P & R95P

Common parts for **both** (pg 05-137 & 05-138)

RHS Code	Before Date Code 5116:	040	060	070	085	100	115
05-45-03	Pressure Switch.....42-102069-01.....	X	X	X	-	-	-
05-45-06	Pressure Switch.....42-102069-10.....	-	-	-	X	-	-
05-45-07	Pressure Switch.....42-102069-02.....	-	-	-	-	X	-
05-45-08	Pressure Switch.....42-102069-08.....	-	-	-	-	-	X

On or After Date Code 5116:

(N) 05-59-08	Pressure Switch.....42-105499-06.....	X	X	X	-	-	-
(N) 05-59-09	Pressure Switch.....42-105499-01.....	-	-	-	X	-	-
(N) 05-59-10	Pressure Switch.....42-105499-04.....	-	-	-	-	X	-
(N) 05-59-05	Pressure Switch.....42-105499-09.....	-	-	-	-	-	X

For: R96V / U96V & R96P

Common parts for **both** (pg 05-139)

***96VA**_____MSA *Prestige* and

R96PA_____MSA *Classic Plus*

RHS Code	040	060	070	085	100	115
Pressure Switches: Before Date Code 5116						
05-46-55	Pressure Switch (High Fire).....42-102070-11.....	X	-	-	-	-
05-45-24	Pressure Switch (High Fire).....42-102070-05.....	-	X	X	-	-
05-45-77	Pressure Switch (High Fire).....42-102070-18.....	-	-	-	X	-
05-45-49	Pressure Switch (High Fire).....42-102070-14.....	-	-	-	-	X
05-46-45	Pressure Switch (High Fire).....42-102070-13.....	-	-	-	-	X
05-45-08	Pressure Switch (Low Fire).....42-102069-08.....	X	-	-	-	-
05-45-62	Pressure Switch (Low Fire).....42-102069-06.....	-	X	X	X	X
05-46-46	Pressure Switch (Low Fire).....42-102069-03.....	-	-	-	-	X

Pressure Switches: **On or After Date Code 5116**

05-59-00	Pressure Switch (High Fire).....42-105583-08.....	X	-	-	-	-
05-59-01	Pressure Switch (High Fire).....42-105583-10.....	-	X	X	-	-
05-59-02	Pressure Switch (High Fire).....42-105583-12.....	-	-	-	X	-
05-59-03	Pressure Switch (High Fire).....42-105583-04.....	-	-	-	-	X
05-59-04	Pressure Switch (High Fire).....42-105583-11.....	-	-	-	-	X
05-59-05	Pressure Switch (Low Fire).....42-105499-09.....	X	-	-	-	-
05-59-06	Pressure Switch (Low Fire).....42-105499-08.....	-	X	X	X	X
05-59-07	Pressure Switch (Low Fire).....42-105499-07.....	-	-	-	-	X