



R98V • USA

Parts Reference Page

**NEW
PAGE**

RHS Code	For : R98V	60	70	85	100	115
05-45-61	Condensate Drain68-104346-01.....	X	X	X	X	X
05-45-00	Complete Parts Bag68-104446-01.....	X	X	X	X	X
05-47-62	Pressure Switch (High Fire)42-106242-04.....	X	-	X	X	X
05-47-69	Pressure Switch (High Fire)42-106242-02.....	-	X	-	-	-
05-47-66	Pressure Switch (Mid Fire)42-106243-01.....	X	-	X	X	X
05-47-65	Pressure Switch (Mid Fire)42-106243-03.....	-	X	-	-	-
05-47-69	Pressure Switch (Low Fire)42-106242-02.....	X	-	-	X	X
05-47-70	Pressure Switch (Low Fire)42-106242-06.....	-	X	-	-	-
05-47-68	Pressure Switch (Low Fire)42-106242-01.....	-	-	X	-	-
05-45-10	Main Limit47-104465-02.....	X	X	X	X	-
05-45-09	Main Limit47-104465-02.....	-	-	-	-	X
05-60-04	Manual Reset47-22861-04.....	X	X	X	X	X
05-46-63	Transformer 50VA46-102856-02.....	X	X	X	X	X
05-46-61	Induced Draft Blower70-104157-86.....	X	X	X	X	X
05-45-21	Blower WheelPD703027.....	X	X	-	-	-
05-45-22	Blower WheelPD703028.....	-	-	X	X	-
05-45-23	Blower WheelPD703029.....	-	-	-	-	X
05-09-37	ECM Motor 1/2 HP51-102602-01.....	X	X	-	-	-
05-28-14	ECM Motor 3/4 HP51-102603-01.....	-	-	X	X	X
05-45-19	Belly Band Motor Mount KitAS-53148-91.....	X	X	X	X	X
05-45-67	Heat Exchanger AssemblyAS-104120-10.....	X	-	-	-	-
05-45-68	Heat Exchanger AssemblyAS104-120-31.....	-	X	-	-	-
05-45-69	Heat Exchanger AssemblyAS-104120-18.....	-	-	X	-	-
05-45-70	Heat Exchanger AssemblyAS-104120-19.....	-	-	-	X	-
05-45-30	Heat Exchanger AssemblyAS-104120-21.....	-	-	-	-	X
05-46-49	Outdoor Sensor KitRXGY-J02.....	X	X	X	X	X
05-45-40	Water Sensor47-104184-01.....	X	X	X	X	X
05-49-12	Memory Module47-104778-18.....	X	-	-	-	-
05-49-13	Memory Module47-104778-19.....	-	X	-	-	-
05-49-14	Memory Module47-104778-20.....	-	-	X	-	-
05-49-15	Memory Module47-104778-21.....	-	-	-	X	-
05-49-16	Memory Module47-104778-22.....	-	-	-	-	X
05-47-72	Burner75-104227-04.....	X	X	X	X	X
Gas Code = KE (first 2 letters of serial #)						
05-47-73	Gas Valve60-102787-05.....	X	X	X	X	X
05-47-76	Integrated Furnace Control Board60-105563-04.....	X	X	X	X	X
05-45-44	Flame Sensor62-23543-08.....	X	X	X	X	X
05-45-46	Spark Ignitor62-24141-05.....	X	X	X	X	X
05-18-49	LP Conversion KitFP-37.....	X	X	X	X	X
05-89-33	LP Orifice62-22175-90.....	4	5	6	7	8

NEW
PAGE

EcoNet Communicating Thermostat & Control



- Intuitive, lifestyle-based programming and a 4.7" color touchscreen display (with easy-to-read icons and text) for easy programming.
- 4 wire control
- Humidification (auto/manual) and dehumidification.
- 5-year limited warranty (from date of installation).
- Indoor/Outdoor temperature display.
- WiFi capability (paired with REWRA630SYS).
- Dual fuel.
- Water heater and pool heater control; when paired with EcoNet-enabled Rheem/Ruud product.
- Modes: Heat, Cool, Auto (includes Vacation mode), Emergency Heat, Fan Only

RHS Code

(N)	05-95-98	UETST700SYS	Ruud EcoNet Control Center - WiFi Included	275.52
			Used with Ruud EcoNet-enabled equipment	
(N)	05-95-99	RETST700SYS	Rheem EcoNet Control Center - WiFi Included	275.52
			Used with Ruud EcoNet-enabled equipment	
	05-45-99*	RETST601SYS	Rheem EcoNet Control Center - WiFi Included	215.50
			Used with Rheem EcoNet-enabled equipment	
	05-45-98*	UETST601SYS	Ruud EcoNet Control Center - WiFi Included	201.40
			Used with Ruud EcoNet-enabled equipment	
	05-44-97*	REWRA630SYS	EcoNet WiFi Kit	132.92
			Provides remote control of EcoNet-enabled equipment from smart phones, tablets and personal computers using the homes' internet connection.	
	05-45-97	RETRN620CC2	EcoNet Translator	50.35
			Installs on EcoNet-enabled air conditioner and heat pump when pairing with an EcoNet-enabled furnace and EcoNet thermostat.	
(N)	09-40-53	8051	Flush Mount Temperature Sensor	46.23
			Duct mounted thermistor.	
	05-91-62	47-102709-02	Outdoor Air Sensor	8.67
			For use with Rheem/Ruud EcoNet-enabled furnace when EcoNet control is used.	
	05-60-07	47-24225-01	Supply Air Sensor	46.23
			Duct mounted thermistor.	
			For use with Rheem/Ruud EcoNet-enabled furnace when EcoNet control is used.	
	05-44-99*	RETSTWPLWHT	EcoNet Wall Plate - White	4.58



EcoNet Translator



Temperature Sensor



Outdoor Sensor



Supply Air Sensor

*Indicates limited quantity