





Designed with the plumber in mind.













LOCKING DRAIN GASKET

QUARTER-TURN TEST PLUGS





INNOVATIVE FROM TOP TO BOTTOM





TRUE BLUE™ TABLE OF CONTENTS

DESIGNED WITH THE PLUMBER IN MIND	4
TRUE BLUE BATH WASTE KIT	5
TIME-SAVING FEATURES	6
TOOL-FREE INSTALLATION	7
DRAIN GASKET	8
QUARTER-TURN TEST PLUGS	9
DESIGNER FINISHES	10
STOPPER DESIGNS	11
ORDERING INFORMATION	12









TRUE BLUE™ BATH WASTE KIT

Introducing True Blue by Dearborn, the next generation of bath waste.

True Blue was thoughtfully designed for pros with a variety of cutting-edge features, like integrated locking components that simplify installation, and quarter-turn test plugs that make testing quick and painless.

True Blue allows you to go from box, to test, to finishing the job in no time.

TRUE BLUE ADVANTAGES

Innovative

- Integrated locking components
- Superior overflow & locking drain gaskets

Plumber-friendly

- Saves time and money
- · Hassle-free, tool-less install

PRODUCTS ARE IN COMPLIANCE WITH THE FOLLOWING CODES:



Uniform Plumbing Code (UPC®)



National Plumbing Code of Canada

IPC

International Plumbing Code (IPC®)

Products are in compliance with the following standards:



ASME A112.18.2-2015/CSA B125.2-15

Flexible





OVERFLOWING WITH TIME-SAVING FEATURES

OVERFLOW TEST PLUG

The quarter-turn test plug comes factory pre-installed, simplifying the job to make testing quick and easy. The True Blue overflow test plug is approved for up to 40 feet of head pressure and doubles as a trim veneer installation tool.

- Overflow cover cannot be installed with test plug in place and reduces potential for bathroom air locks
- Reusable

A NEXT-GEN GASKET

Made with an innovative foamed rubber material, True Blue's overflow gasket provides better compression and memory than traditional gaskets, creating a more reliable seal that will rebound and prevent leaks.

- Unique foamed rubber material
- Superior compression & memory for a better seal that reduces potential for leak paths

Oatey.com/Dearborn







TOOL-FREE INSTALLATION

The True Blue overflow cover locks with a simple clockwise turn, requiring no additional tools or screws for installation.

And with depth adjustability, it can accommodate various tub styles and thicknesses with an additional clockwise turn.

OVERFLOW COVER FEATURES

- No tools needed
- Depth adjustability to fit many tub styles and thicknesses
- Removable for maintenance
- No set screw required
- High flow rate
- Eliminates need for perfect alignment







TOOLS HIGH EDED FLOW RA







WHILE OTHER OVERFLOW COVERS REQUIRE SCREWS AND PRECISE ALIGNMENT, TRUE BLUE IS A PERFECT INSTALL EVERY TIME



TWIST AND LOCK OVERFLOW COVER DESIGN



LESS FRUSTRATION EASIER INSTALLATION

Many bath waste installations are performed in tight quarters with limited visibility or little room to maneuver. True Blue improves the process with a set of integrated features to make the job smoother.

DRAIN GASKET FEATURES

- · Locking rubber gasket comes pre-assembled
- Will not move or fall off at odd or difficult angles while installing drain spud
- Softer durometer for better seal







IT STANDS THE TRUE BLUE™ TEST

QUARTER-TURN TEST PLUGS

- Test plugs avoid cross-threading and misalignment
- Integrated locking mechanism makes test plug install quick and reliable
- Drain test plug removable with pipe





DESIGNER FINISHES

STYLISH FINISHES

True Blue Bath Waste comes in chrome, brushed nickel oil-rubbed bronze, matte black and white.

TRIM KITS FOR ALL FINISHES

- Quickly change trim without removing the spud
- No additional sealants required
- Easily installed with overflow test plug















STOPPER DESIGN OPTIONS













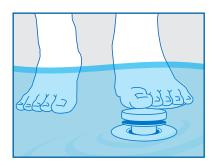





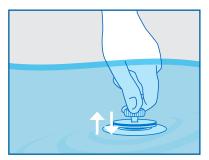





ORDER TRUE BLUE™BATH WASTE

ORDER TRUE BLUE BATH WASTE IN FULL, HALF, ROUGH OR TRIM KITS IN SCHEDULE 40 PVC OR ABS

FULL KIT INCLUDES



HALF KIT INCLUDES

*Designer Finish Half Kits include Trim Veneer



ROUGH KIT INCLUDES



TRIM KIT INCLUDES





FULL KITS ORDERING INFORMATION

PVC





FULL KIT P9850CP (SHOWN ASSEMBLED)

ITEM NO.	DESCRIPTION	CASE QTY	UPC
P9840CP	True Blue PVC Full Kit, Push N' Pull Stopper, w/ Test Kit CHR	10	041193343185
P9840BN	True Blue PVC Full Kit, Push N' Pull Stopper, w/ Test Kit BN	10	041193343192
P9840RB	True Blue PVC Full Kit, Push N' Pull Stopper, w/ Test Kit ORB	10	041193343208
P9850CP	True Blue PVC Full Kit, Touch Toe Stopper, w/ Test Kit CHR	10	041193104908
P9850BN	True Blue PVC Full Kit, Touch Toe Stopper, w/ Test Kit BN	10	041193104915
P9850RB	True Blue PVC Full Kit, Touch Toe Stopper, w/ Test Kit ORB	10	041193104922
P9860CP	True Blue PVC Full Kit, Uni-Lift Stopper, w/ Test Kit CHR	10	041193104939
P9860BN	True Blue PVC Full Kit, Uni-Lift Stopper, w/ Test Kit BN	10	041193104946
P9860RB	True Blue PVC Full Kit, Uni-Lift Stopper, w/ Test Kit ORB	10	041193104953



FULL KITS ORDERING INFORMATION

ABS



ITEM NO.	DESCRIPTION	CASE QTY	UPC
A9840CP	True Blue ABS Full Kit, Push N' Pull Stopper, w/ Test Kit CHR	10	041193343154
A9840BN	True Blue ABS Full Kit, Push N' Pull Stopper, w/ Test Kit BN	10	041193343161
A9840RB	True Blue ABS Full Kit, Push N' Pull Stopper, w/ Test Kit ORB	10	041193343178
A9850CP	True Blue ABS Full Kit, Touch Toe Stopper, w/ Test Kit CHR	10	041193104847
A9850BN	True Blue ABS Full Kit, Touch Toe Stopper, w/ Test Kit BN	10	041193104854
A9850RB	True Blue ABS Full Kit, Touch Toe Stopper, w/ Test Kit ORB	10	041193104861
A9860CP	True Blue ABS Full Kit, Uni-Lift Stopper, w/ Test Kit CHR	10	041193104878
A9860BN	True Blue ABS Full Kit, Uni-Lift Stopper, w/ Test Kit BN	10	041193104885
A9860RB	True Blue ABS Full Kit, Uni-Lift Stopper, w/ Test Kit ORB	10	041193104892

A9850CP

TO PLACE AN ORDER

Contact your local Oatey Representative 800-321-9532 | Oatey.com



HALF KITS ORDERING INFORMATION

PVC



P9960CP

ITEM NO.	DESCRIPTION	CASE QTY	UPC
P9940	True Blue PVC Half Kit, Push N' Pull Stopper, no Test Kit, CHR	10	041193343352
P9940CP	True Blue PVC Half Kit, Push N' Pull Stopper, w/ Test Kit, CHR	10	041193343369
P9940BN	True Blue PVC Half Kit, Push N' Pull Stopper, w/ Test Kit, BN	10	041193343376
P9940RB	True Blue PVC Half Kit, Push N' Pull Stopper, w/ Test Kit, ORB	10	041193343383
P9940WH	True Blue PVC Half Kit, Push N' Pull Stopper, w/ Test Kit, WH	10	041193343390
P9940MB	True Blue PVC Half Kit, Push N' Pull Stopper, w/ Test Kit, MB	10	041193343406
P9950	True Blue PVC Half Kit, Touch Toe Stopper, no Test Kit, CHR	10	041193105042
P9950CP	True Blue PVC Half Kit, Touch Toe Stopper, w/ Test Kit, CHR	10	041193105059
P9950BN	True Blue PVC Half Kit, Touch Toe Stopper, w/ Test Kit, BN	10	041193105066
P9950RB	True Blue PVC Half Kit, Touch Toe Stopper, w/ Test Kit, ORB	10	041193105073
P9950WH	True Blue PVC Half Kit, Touch Toe Stopper, w/ Test Kit, WH	10	041193343314
P9950MB	True Blue PVC Half Kit, Touch Toe Stopper, w/ Test Kit, MB	10	041193343321
P9960	True Blue PVC Half Kit, Uni-Lift Stopper, no Test Kit, CHR	10	041193105080
P9960CP	True Blue PVC Half Kit, Uni-Lift Stopper, w/ Test Kit, CHR	10	041193105097
P9960BN	True Blue PVC Half Kit, Uni-Lift Stopper, w/ Test Kit, BN	10	041193105103
P9960RB	True Blue PVC Half Kit, Uni-Lift Stopper, w/ Test Kit, ORB	10	041193105110
P9960CPZ	True Blue PVC Half Kit, Uni-Lift Stopper, w/ Test Kit, Zinc CHR	10	041193105233
P9960WH	True Blue PVC Half Kit, Uni-Lift Stopper, w/ Test Kit, WH	10	041193343338
P9960MB	True Blue PVC Half Kit, Uni-Lift Stopper, w/ Test Kit, MB	10	041193343345



HALF KITS ORDERING INFORMATION

ABS



A9950RB

ITEM NO.	DESCRIPTION	CASE QTY	UPC
A9940	True Blue ABS Half Kit, Push N' Pull Stopper, no Test Kit CHR	10	041193343253
A9940CP	True Blue ABS Half Kit, Push N' Pull Stopper, w/ Test Kit, CHR	10	041193343260
A9940BN	True Blue ABS Half Kit, Push N' Pull Stopper, w/ Test Kit, BN	10	041193343277
A9940RB	True Blue ABS Half Kit, Push N' Pull Stopper, w/ Test Kit, ORB	10	041193343284
A9940WH	True Blue ABS Half Kit, Push N' Pull Stopper, w/ Test Kit, WH	10	041193343291
A9940MB	True Blue ABS Half Kit, Push N' Pull Stopper, w/ Test Kit, MB	10	041193343307
A9950	True Blue ABS Half Kit, Touch Toe Stopper, no Test Kit, CHR	10	041193104960
A9950CP	True Blue ABS Half Kit, Touch Toe Stopper, w/ Test Kit, CHR	10	041193104977
A9950BN	True Blue ABS Half Kit, Touch Toe Stopper, w/ Test Kit, BN	10	041193104984
A9950RB	True Blue ABS Half Kit, Touch Toe Stopper, w/ Test Kit, ORB	10	041193104991
A9950WH	True Blue ABS Half Kit, Touch Toe Stopper, w/ Test Kit, WH	10	041193343215
A9950MB	True Blue ABS Half Kit, Touch Toe Stopper, w/ Test Kit, MB	10	041193343222
A9960	True Blue ABS Half Kit, Uni-Lift Stopper, no Test Kit CHR	10	041193105004
A9960CP	True Blue ABS Half Kit, Uni-Lift Stopper, w/ Test Kit CHR	10	041193105011
A9960BN	True Blue ABS Half Kit, Uni-Lift Stopper, w/ Test Kit BN	10	041193105028
A9960RB	True Blue ABS Half Kit, Uni-Lift Stopper, w/ Test Kit ORB	10	041193105035
A9960CPZ	True Blue ABS Half Kit, Uni-Lift Stopper, w/ Test Kit Zinc CHR	10	041193105226
A9960WH	True Blue ABS Half Kit, Uni-Lift Stopper, w/ Test Kit WH	10	041193343239
A9960MB	True Blue ABS Half Kit, Uni-Lift Stopper, w/ Test Kit Zinc MB	10	041193343246

TO PLACE AN ORDER

Contact your local Oatey Representative 800-321-9532 | Oatey.com



ROUGH KITS ORDERING INFORMATION

PVC



ITEM NO.	DESCRIPTION	CASE QTY	UPC
P9970	True Blue PVC Rough Kit, No Test Kit, CHR	10	041193105141
P9975	True Blue PVC Rough Kit, w/ Test Kit, CHR	10	041193105158
P9975Z	True Blue PVC Rough Kit, w/ Test Kit, Zinc CHR	10	041193105257

ABS



ITEM NO.	DESCRIPTION	CASE QTY	UPC
A9970	True Blue ABS Rough Kit, No Test Kit, CHR	10	041193105127
A9975	True Blue ABS Rough Kit, w/ Test Kit, CHR	10	041193105134
A9975Z	True Blue ABS Rough Kit, w/ Test Kit, Zinc CHR	10	041193105240



TRIM KITS ORDERING INFORMATION

TOUCH-TOE



ITEM NO.	DESCRIPTION	CASE QTY	UPC
K97CP	True Blue Trim Kit, Touch Toe, CHR, No Veneer Included	10	041193105165
K97BN	True Blue Trim Kit, Touch Toe, BN	10	041193105172
K97RB	True Blue Trim Kit, Touch Toe, ORB	10	041193105189
K97WH	True Blue Trim Kit, Touch Toe, WH	10	041193343413
K97MB	True Blue Trim Kit, Touch Toe, MB	10	041193343420

UNI-LIFT



K98RB

ITEM NO.	DESCRIPTION	CASE QTY	UPC
K98CP	True Blue Trim Kit, Uni-Lift, CHR, No Veneer Included	10	041193105196
K98BN	True Blue Trim Kit, Uni-Lift, BN	10	041193105202
K98RB	True Blue Trim Kit, Uni-Lift, ORB	10	041193105219
K98WH	True Blue Trim Kit, Uni-Lift, WH	10	041193343437
K98MB	True Blue Trim Kit, Uni-Lift, MB	10	041193343444

PUSH N' PULL



K98RB

ITEM NO.	DESCRIPTION	CASE QTY	UPC
K99CP	True Blue Trim Kit, Push N' Pull, CHR, No Veneer Included	10	041193343451
K99BN	True Blue Trim Kit, Push N' Pull, BN	10	041193343468
K99RB	True Blue Trim Kit, Push N' Pull, ORB	10	041193343475
K99WH	True Blue Trim Kit, Push N' Pull, WH	10	041193343482
K99MB	True Blue Trim Kit, Push N' Pull, MB	10	041193343499

TO PLACE AN ORDER

Contact your local Oatey Representative 800-321-9532 | Oatey.com



REPLACEMENT PARTS

ORDERING INFORMATION



4516-3

ITEM NO.	DESCRIPTION	CASE QTY	UPC
4516-1	True Blue Brass Drain Spud	10	041193115874
4516-2	True Blue Drain Elbow Gasket	100 (10 per bag)	041193115805
4516-3	True Blue Overflow Washer	120 (20 per bag)	041193115423
4516-4	True Blue Drain & Overflow Test Plugs	100 (5 each per bag)	041193115867
4516-5	True Blue Zinc Drain Spud	10	041193115850
4516-6	True Blue Trim Veneer, BN	10	041193115843
4516-7	True Blue Trim Veneer, ORB	10	041193115836
4516-8	True Blue Overflow Faceplate, BN	10	041193115829
4516-9	True Blue Overflow Faceplate, ORB	10	041193115812
4516-10	True Blue Overflow Faceplate, CHR	10	041193115881















deliver quality. build trust. improve lives.

