



AIR ADMITTANCE VALVES TECHNICAL SPECIFICATION

Job Name _____	Item # _____
Location _____	
Engineer _____	Contractor _____
PO # _____	Tag _____
Representative _____	

SPECIFICATIONS

The purpose of an Air Admittance Valve is to provide a method of allowing air to enter the plumbing drainage system without the use of a vent extended to open air and to prevent sewer gases from escaping into a building. An Air Admittance Valve is a one way valve designed to allow air to enter the plumbing drainage system when negative pressures develop in the piping system. The device shall close by gravity and seal the vent terminal at zero differential pressure (no flow conditions) and under positive internal pressures.

APPROVALS & LISTINGS

ASSE 1050 & 1051

ICC ESR-1664

NSF Standard 14

IAPMO – Classified Mark

ASTM D 2665/D 2661

International Plumbing Code (IPC) 2003

International Residential Code (IRC) 2003



FEATURES & MATERIALS

Tension Membrane	Silicone
Sweet Spot™	Sweet Spot™ technology opens at -0.01 psi and seals at 0 psi and above
Screening	Screening on air inlets to guard the seal
Grip	Protective sleeve provides grip for installation and keeps valve free from debris
Tested	100% functionally tested at 1/4" H ₂ O and 30" H ₂ O ensuring trouble free performance
Warranty	Limited Warranty

INSTALLATION

Read installation instructions prior to use of this product. Always consult local plumbing codes prior to installing an AAV. Individual, branch and circuit vents are permitted to terminate with a connection to a Sure-Vent® AAV. The Sure-Vent® AAV will only vent fixtures that are on the same floor and connect to a horizontal branch drain. The horizontal branch drain shall connect to the drainage stack a maximum of four branch intervals from the top of the stack. The Sure-Vent® AAV should be located within the maximum developed length permitted for the vent. The Sure-Vent® AAV must be located a minimum of 4 inches above the horizontal branch drain and 6 inches above any insulation material and within 15 degrees of vertical. Every structure in which plumbing is installed shall have at least one primary stack vent. The stack vent should run as directly as possible from the building drain through to the open air.

Apply approved pipe joint compound or thread seal tape to the male threads of the valve. Remove protective sleeve after installation.

Sure-Vent® AAVs are not designed to relieve positive pressure.





Sealed Pit / Mechanical Pump Applications: When venting a sealed pit / mechanical pump application, first confirm with local code enforcement and pump manufacturer the use of an Oatey® Sure-Vent is an approved application. If approval is received from both entities, reach out to Oatey Technical for further information (technical@oatey.com).

Multiple Floors/Stack: For stack vents that serve drainage stacks serving more than 6 branch intervals, the use of an Oatey® Sure-Vent is prohibited. For further questions, reach out to Oatey Technical (technical@oatey.com).

Access BIM/Revit content through www.oatey.com

AIR ADMITTANCE VALVES TECHNICAL SPECIFICATION

	DFU Rating	Connection	Membrane	Adapter
A	20 Branch, 8 Stack	1.5" PVC NPT Threads	Silicone	1.5" PVC
B	160 Branch, 24 Stack	2" PVC NPT Threads	Silicone	1.5" x 2" PVC or ABS
C	160 Branch, 72 Stack	2" PVC NPT Threads	Silicone	2" x 3" PVC or ABS
D	160 Branch, 500 Stack	3" PVC NPT Threads	Silicone	3" x 4" PVC or ABS

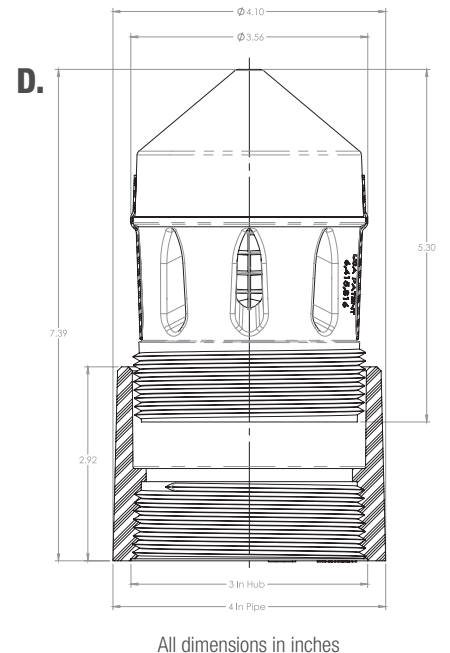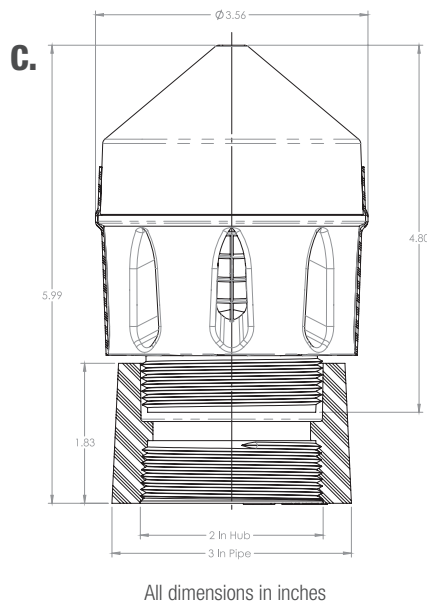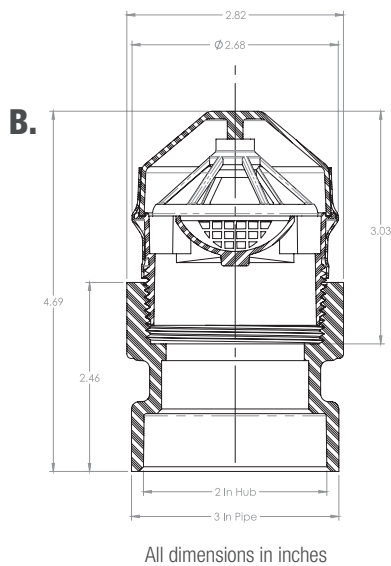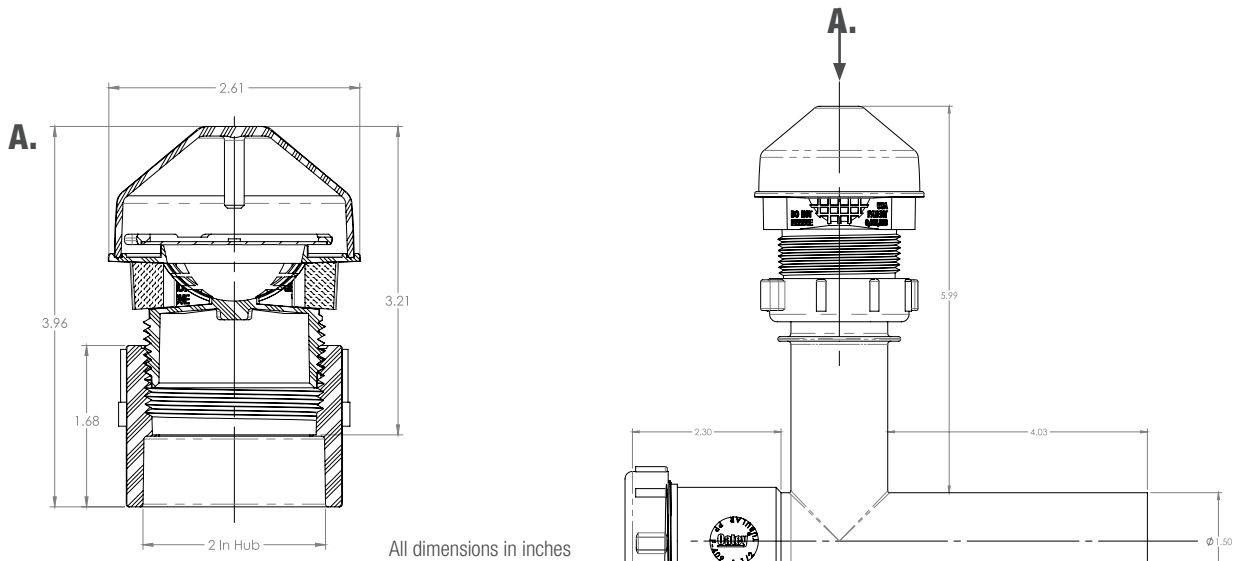



AIR ADMITTANCE VALVES TECHNICAL SPECIFICATION

PRODUCT SELECTOR

20 BRANCH, 8 STACK DFU SURE-VENT AIR ADMITTANCE VALVE WITH SCHEDULE 40 ADAPTER

✓	Product Number	Description	Pack
	39228	20 BRANCH, 8 STACK DFU SURE-VENT, 1.5 IN, W/PVC SCHED 40 ADAPTER	6
	39229	20 BRANCH, 8 STACK DFU SURE-VENT, 1.5 IN, W/ABS SCHED 40 ADAPTER	6
	39005	20 BRANCH, 8 STACK DFU SURE-VENT, 1.5 IN PVC SCHED 40 ADAPTER	50
	39227	20 BRANCH, 8 STACK DFU SURE-VENT, 1.5 IN W/ABS SCHED 40 ADAPTER	6
	39250	20 BRANCH, 8 STACK DFU SURE-VENT, 1.5 IN, 90 DEG PVC SCHED 40 ADAPTER	50
	39251	20 BRANCH, 8 STACK DFU SURE-VENT, 1.5 IN, 90 DEG ABS SCHED 40 ADAPTER	6
	39252	20 BRANCH, 8 STACK DFU SURE-VENT, 1.5 IN, 90 DEG PVC SCHED 40 ADAPTER	6
	39253	20 BRANCH, 8 STACK DFU SURE-VENT, 1.5 IN, W/90 DEG ABS SCHED 40 ADAPTER	6
	39254	20 BRANCH, 8 STACK DFU SURE-VENT, 1.5 IN, STRAIGHT PVC SCHED 40 ADAPTER	50
	39256	20 BRANCH, 8 STACK DFU SURE-VENT, 1.5 IN, STRAIGHT ABS SCHED 40 ADAPTER	50
	39255	20 BRANCH, 8 STACK DFU SURE-VENT, 1.5 IN, STRAIGHT PVC SCHED 40 ADAPTER	6
	39020	20 BRANCH, 8 STACK DFU SURE-VENT, 1.5 IN, NO ADAPTER	50

20 BRANCH, 8 STACK DFU SURE-VENT AIR ADMITTANCE VALVE WITH TUBULAR ADAPTER

✓	Product Number	Description	Pack
	39225	20 BRANCH, 8 STACK DFU SURE-VENT, 1.5 IN WHITE TUBULAR ADAPTER	6
	39226	20 BRANCH, 8 STACK DFU SURE-VENT, 1.5 IN BLACK TUBULAR ADAPTER	6
	39239	20 BRANCH, 8 STACK DFU SURE-VENT, 1.5 IN, INSTALLATION PACK W/TUBULAR ADAPTER	6
	39020	20 BRANCH, 8 STACK DFU SURE-VENT, 1.5 IN, NO ADAPTER	50
	392393	20 BRANCH, 8 STACK DFU SURE-VENT, 1.5 IN, INSTALLATION PACK- 3 PACK	6
	39245	20 BRANCH, 8 STACK DFU SURE-VENT, 1.5 IN, TRAP PACK	20

Access BIM/Revit content through www.oatey.com



AIR ADMITTANCE VALVES TECHNICAL SPECIFICATION

PRODUCT SELECTOR

160 BRANCH, 24 STACK DFU SURE-VENT AIR ADMITTANCE VALVE WITH SCHEDULE 40 ADAPTER			
✓	Product Number	Description	Pack
	39016	160 BRANCH, 24 STACK DFU SURE-VENT, 1.5 X 2 IN PVC SCHED 40 ADAPTER	6
	39018	160 BRANCH, 24 STACK DFU SURE-VENT, 1.5 X 2 IN ABS SCHED 40 ADAPTER	6
	39017	160 BRANCH, 24 STACK DFU SURE-VENT, 1.5 X 2 IN PVC SCHED 40 ADAPTER	50
	39019	160 BRANCH, 24 STACK DFU SURE-VENT, 1.5 X 2 IN ABS SCHED 40 ADAPTER	50
	39238	160 BRANCH, 24 STACK DFU SURE-VENT, 1.5 IN W/MECHANICAL ADAPTER	12
	39018C	160 BRANCH, 24 STACK DFU SURE-VENT, 1.5-2 IN ABS CANADA	6
160 BRANCH, 72 STACK DFU SURE-VENT AIR ADMITTANCE VALVE WITH SCHEDULE 40 ADAPTER			
✓	Product Number	Description	Pack
	39220	160 BRANCH, 72 STACK DFU SURE-VENT, 2 X 3 IN PVC SCHED 40 ADAPTER	6
	39221	160 BRANCH, 72 STACK DFU SURE-VENT, 2 X 3 IN ABS SCHED 40 ADAPTER	6
160 BRANCH, 500 STACK DFU SURE-VENT AIR ADMITTANCE VALVE WITH SCHEDULE 40 ADAPTER			
✓	Product Number	Description	Pack
	39223	160 BRANCH, 500 STACK DFU SURE-VENT, 3 X 4 IN PVC SCHED 40 ADAPTER	6
	39224	160 BRANCH, 500 STACK DFU SURE-VENT, 3 X 4 IN ABS SCHED 40 ADAPTER	6

Data is subject to manufacturing tolerances.

Access BIM/Revit content through www.oatey.com